


ASSEMBLY VIEW

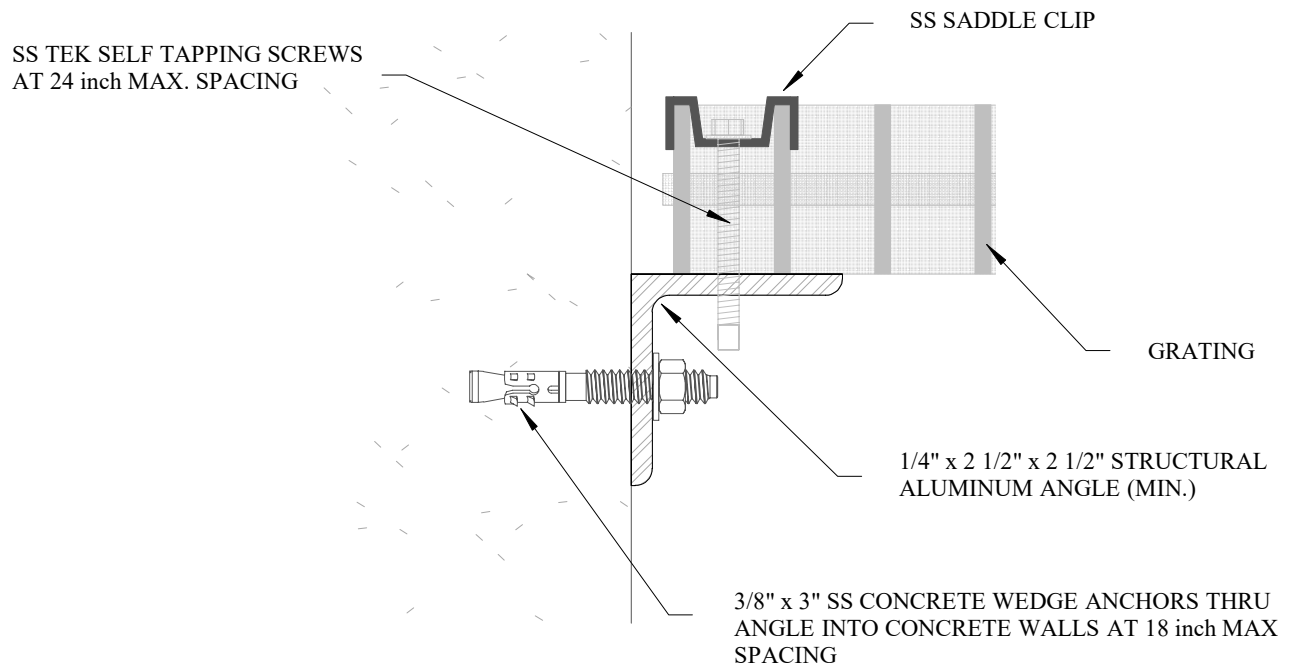

SECTION VIEW

ASSEMBLY INSTRUCTIONS

1. Hold support rails in place and mark holes for drilling.
2. Drill holes into concrete with hammer-type drill. Drill bit diameter = wedge anchor diameter.
3. Hold support rails in place and install wedge anchors thru holes in rails.
4. Tighten nuts on wedge anchors. Do not over-tighten.
5. Lay grating on top of support rails and space sides evenly.
6. Install saddle clips and secure grating with self-tapping screws.
7. Install double-type saddle clips to support center of grating (if required).

This CAD file and drawing is the property of Effluent Design & Fabrication, LLC. It is intended for the named recipient. Unauthorized reproduction, disclosure, or distribution is strictly prohibited.



Effluent
 Design & Fabrication, LLC
www.effluentdesignfab.com

PO Box 2273
 Flemington, NJ 08822
 Phone: 908.458.9220
 FAX: 908.458.9930

PROJECT:
**GRATING SUPPORT RAIL
 DETAILS & INSTALLATION
 INSTRUCTIONS**

FILE #:	SD1538
DATE:	4-21-15
SCALE:	
DRAWN BY:	KJP